

Love your gear? Let's spread the word.

If you're in love with your White Duck products, help us help others make the same intelligent decisions about their outdoor gear by leaving us a review on Google (or on Amazon, if that's where you purchased your gear).



Tag us for a chance to be featured.

Oh, and give us a follow to stay up-to-date with inspiration for the outdoors, promotions & giveaways.

CONNECT WITH US ON



WhiteDuckOutdoors



whiteduck_outdoors



whiteduck_outdoors



whiteduckoutdoors

www.whiteduckoutdoors.com



WHITTEPICK

Owner's Manual

Avalon Bell Tent

13', 16', 20', 23'

[#reconnectnow](#)

Table of Contents

01	Welcome Note	03
02	Warning & Liability	05
03	Get to know your Avalon	09
04	Set up & take down instructions	11
05	Setting up your bell tent	13
06	Taking down your bell tent	21
07	Caring for your tent	24
08	Essential add ons	26



Congrats!

You're about to make some incredible memories.

Oh, boy. You just got your hands on the best bell tent out there. Take a moment to revel in the satisfaction of making one of the best decisions about your outdoor gear yet.

Back from your moment of bliss? Let's continue!

This guide contains complete instructions for setting up your tent, tips for packing and storing it away and links to helpful resources. We recommend going through the entire thing before you take your tent out for the first time, you never know what information you might need.

Each time you use your tent, you can feel proud about your purchase because every product we design is built on three pillars:

Product quality | We go above and beyond to ensure the quality of your gear is exactly what you expect, and more.

User experience | We build products with you, the end user, at the forefront of our design principles, so that your experience is as seamless and enjoyable as possible.

Sustainability | This is in the fabric of everything we do, be it reducing energy consumption in the manufacture of your tent, or managing waste more responsibly.

We're proud of where we've come as a brand and we wouldn't be where we are without you - and for that, a heartfelt thank you.

With that in mind, if you love your new gear and can't wait to share it with the world, drop us a review on Google and help others make the same intelligent decisions about their gear.

If you find something isn't quite right with your purchase or you run into problems later on, please, let us know first. We'll do everything we can to make it right. We're just an email or chat away.

Keep wandering,
Team White Duck



Warnings & Liability

| Fire Safety

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC

The materials used in the manufacture of the Fire Water Repellent fabric meet the flame resistance requirements of CPAI-84. It is not fireproof. The fabric will ignite and burn if left in continuous contact with any open flame or other sources of ignition. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

Canvas tents are not for use with open fire pits. Fire safety is the responsibility of the user. We encourage you to educate yourself and practice vigilant fire safety. Do not hesitate to contact us if you have any questions or concerns at any time. It is imperative to acknowledge the local rules and regulations and if you are unsure, to ask about campsite/local policies or refer to the local civil protection/defense, forestry, fire service websites for further information. Always check local fire restrictions prior to starting a fire as rules and regulations may change frequently throughout the year.

NOTE

White Duck Outdoors cannot be held liable for any damage or injury to persons or property resulting from the use or misuse of fire or flammable materials in or around our tents.



| Precautions

The following precautions should be taken when you go outdoors:

- 01** Be certain that your tent is properly ventilated (especially if you decide to ignore the first warning and use a heater in your tent). Carbon monoxide is real, and can cause serious damage such as death. Vents and screens are built into the tent body.
- 02** Be sure to anchor your tent properly—this is not a free-standing tent—follow the instructions in this manual for proper staking practices and ensure that all guy ropes & pegs are securely fixed.
- 03** Be certain that children are supervised in and around the tent at all times.
- 04** Do not use candles, matches or open flames of any kind in or near the tent.
- 05** It is better to not cook inside a tent, but if you are, do not leave cooking unattended. Make sure grills, cooking appliances and similar must not be placed nearer than 1 meter to tent canvas. There should be no use of open fires or glowing charcoal inside tents or near tent canvas – fire can spread very quickly. There should be no use of open fires or glowing charcoal inside tents or near tent canvas as there is a significant risk from the buildup of carbon monoxide (CO), particularly in a confined space inside the tent. All flexible tubes and couplings to the gas burner should be checked for leakage and that they're in good order.
- 06** Build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night.
- 07** Ensure that electrical appliances are in good condition with no frayed wires, etc. Do not leave laptops, phones or tablets plugged in and charging unattended.
- 08** Exercise extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible. Do not refuel lamps, heaters or stoves inside a tent. Extinguish or turn off all lanterns before going to sleep.
- 09** Do not pitch under trees, on cliffs or places with uneven surfaces; this can lead to you falling.
- 10** Do not smoke in a tent or store flammable liquids inside a tent. Installation of log burners or heating equipment is at your own risk.

White Duck Warranty

We strive to manufacture the best possible products for our customers. Our limited lifetime White Duck Warranty covers products against defects in materials or workmanship. This warranty is extended to the original owner only and excludes normal wear and tear (e.g, zippers that wear out after extended use), misuse, alterations made by anyone other than us, intentional damage or damage from extreme weather conditions. Please follow all care instructions!

If, after inspection, a product is determined by us to be defective in workmanship or materials, we will repair or replace it at our option, at no cost to you.

Remember, a dry tent is a healthy tent. Do not store your tent when it is damp. If you must break camp and roll up a damp tent, be sure to stake it back out and set it up fully when you get home so it can air dry. Even small amounts of moisture (when your tent is stored) can lead to the growth of mold or mildew. This same mold will also damage your tent's water repellency. Mold growth on your tent is not covered by warranty.

**For complete details on our warranty,
please visit our website:**



Sometimes after you receive a tent,
our customers ask questions like...

What are some tips for using a wood stove in my tent?



 
If you're interested in learning more about your tent or how to make the most of your time outdoors, we have product-specific videos, vlogs, Shorts and more on our YouTube channel.



Get to know your Avalon

Your tent includes

1 Tent | 1 Pole bag | 1 Tool kit

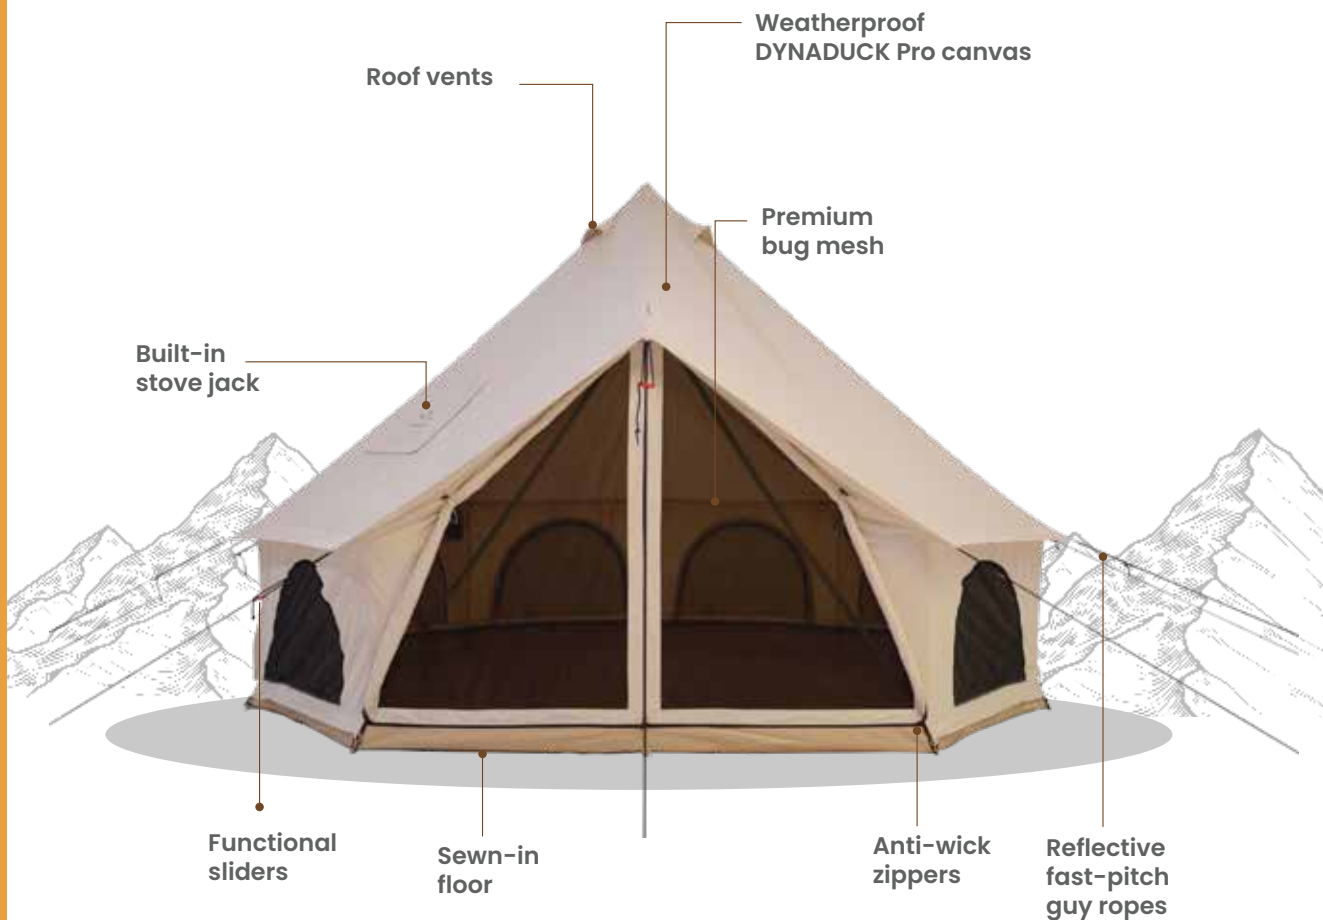

With your tent...

Frame	13'	16.5'	20'	23'
Center Pole	1	1	1	1
A-Frame Pole	1	1	1	3

Tool Kit	13'	16.5'	20'	23'
Jpeg	20	24	28	32
Pin	10	12	14	16
Rubber Mallet	1	1	1	1

| Poles



Center pole



A-frame pole



Pins



JPegs

| Tool Kit

 


Rubber Mallet

 
Set up & take down instructions

Before you begin the setup process, it's important to first make sure you've chosen a viable site for your tent. Look for a flat, dry surface, free of rocks, sticks, and other debris.

We would also advise not setting up your tent directly under trees or close to a body of water, as this increases the likelihood of mold & mildew formation.

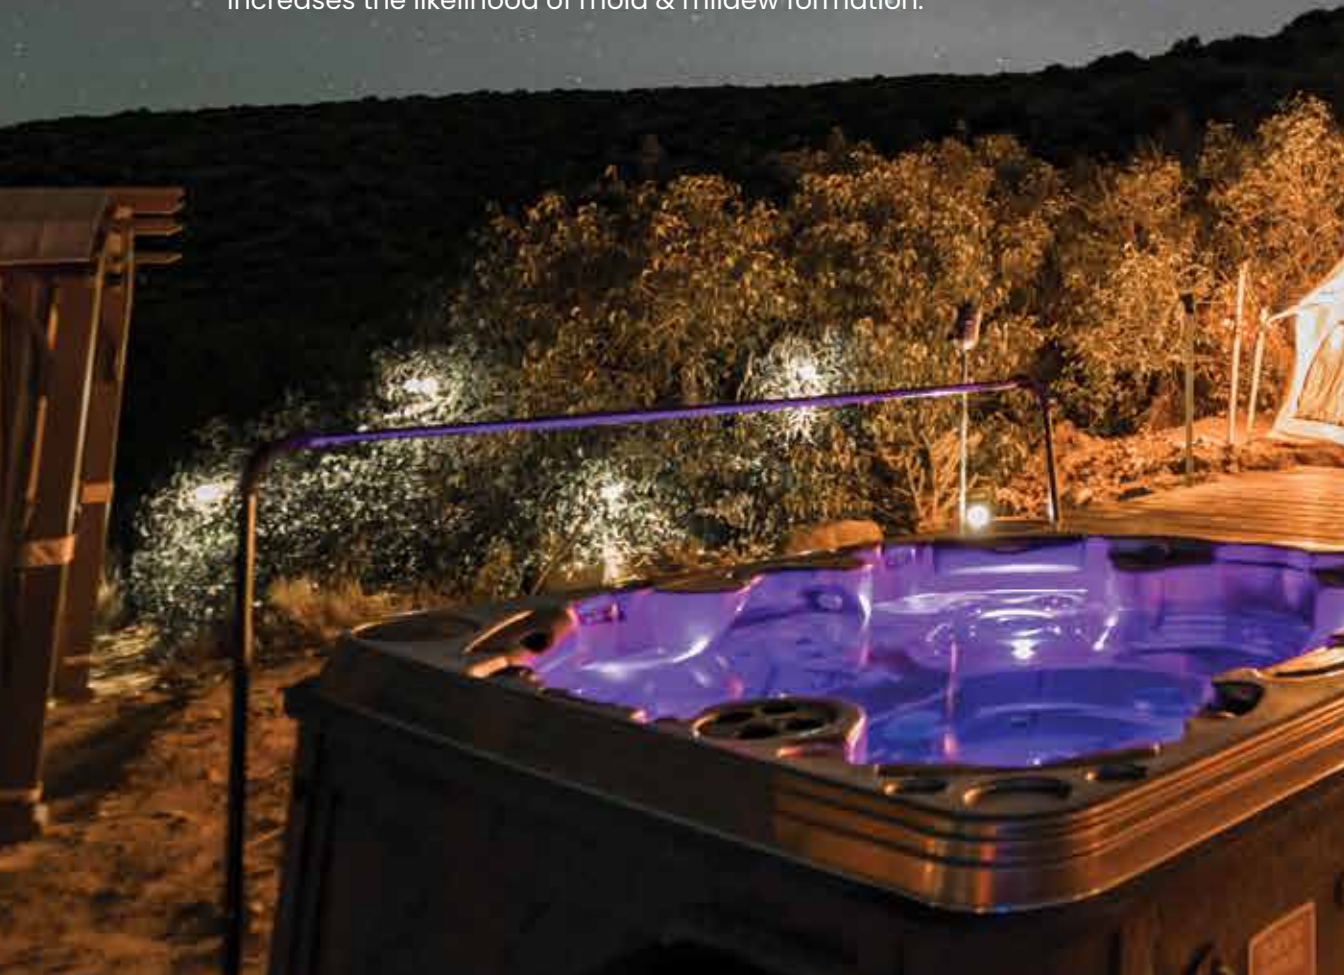



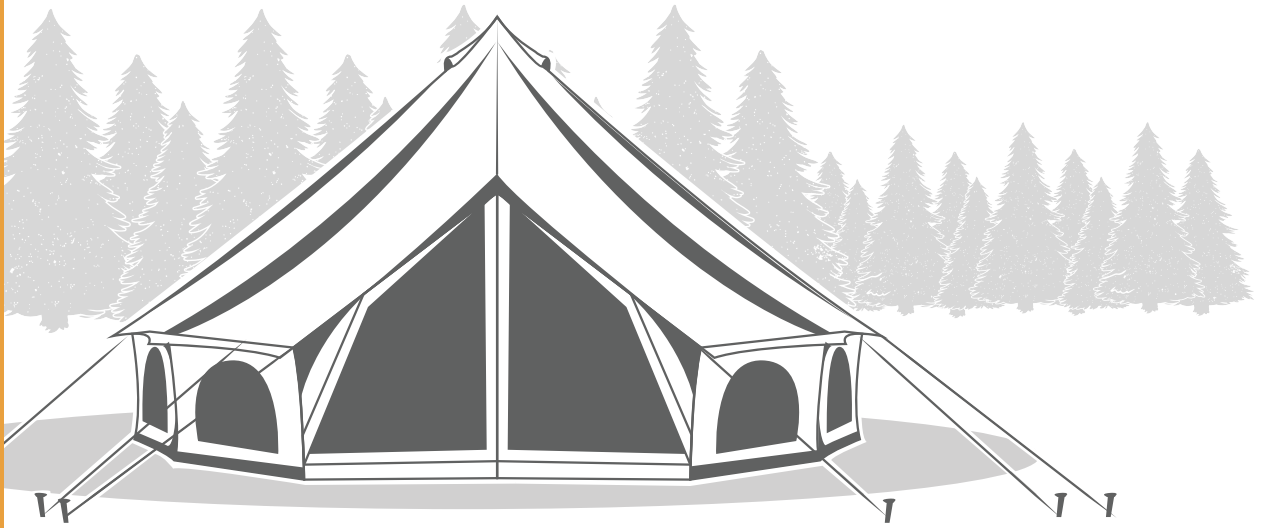

Setting up your Avalon

| Preparation

The natural waterproofing of cotton canvas means it expands slightly the first time it's exposed to water. To season your tent, we recommend hosing it down at home with water and letting it dry out before taking it on your first camping trip.

Setting up the tent at home once also ensures you'll spend less time pitching the tent when you get to the campsite and you won't run into any unexpected surprises.

01**Lay out the tent**

First, pull all the components out of the storage bag and lay everything out on the ground. Spread your tent out and position it so the door is facing the direction you prefer. Keep the other tent components nearby so you can access them easily.

Also, make sure to hold on to the ties around the folded tent, you'll need them when packing away your tent after your trip.

**02****Stake the base of the tent down**

Using the pins (the smaller of the two sets of stakes provided), stake down the ground sheet, driving them into the metal grommets attached to the PVC floor at the base of the tent on the outside.


 **Tips**
#1

When staking the pins, either (1) move in a star-pattern, or (2) go around the tent in a clockwise direction, rather than inserting the pins haphazardly.

#2

Angle the pins and stakes inwards, at a 45-degree angle towards the center of the tent.

03

Assemble and position the center pole

Piece the center pole together (the straight pole with the d-ring on one end), unzip the tent door and enter the tent with the pole. With the d-ring side of the pole facing up, position it in the middle of the circular centerpiece on the ceiling of the tent.

Push the roof up, then station the bottom of the center pole in the center of the ground sheet, so the center pole is perfectly perpendicular to the ground.



04

Assemble and position the A-frame door pole

Assemble the door pole by snapping the separate parts into place and enter the tent with it. Remove the rain cap and place the spike at the top of the A-frame through the metal grommet at the top of the door, and the feet of the A-frame in the sleeves on either side of the door on the inside. Then cover the spike on the outside with the rain cap again.



05

Stake down the elastic cords at the base of the tent

Using the Jpegs (the larger of the two sets of stakes provided), stake the elastic cords connected to the cotton loops at the base of the tent.



06

Stake down the ropes using the remaining stakes

Zip up the tent door, then stake the guy ropes to the ground using the larger stakes (Jpegs), ensuring the ropes are not taut (you will tighten them later). Start with the center door, then the two ropes on either side of the door, then proceed in a single direction, either clockwise or anti-clockwise.



Once all the guy ropes are in position and the shape of the tent starts to come together, you can hammer the pegs all the way into the ground. Now, you can start to tighten the guy ropes to straighten the tent walls by pulling the metal runner towards you.

07

Unzip your floor and roll up the walls of your tent to create a canopy (optional)

If the weather and occasion calls for it, the Avalon has a zipper on the floor that you can use to detach the floor from the walls. This allows you to roll up the walls so that you're hanging out under a canopy. This is a great option for warmer days!



💡 Tips

#3

When staking, ensure that the rope is in line with the seam of the tent that runs from the roof of the tent down to the point where the rope is attached to the tent wall. This helps maintain a consistent distance between the ropes and helps prevent the tent being pulled in different directions.

#4

Angle the stakes inwards, at a 45-degree angle towards the center of the tent.

 
#5

Tightening the guy ropes is like tuning a guitar; all the ropes work together to make the perfect shape. For example, if they're too tight on one side and the tent starts to lean in a certain direction, you'll have to loosen them slightly and go around to the other side and tighten them. It's a process of fine-tuning that may require you to step back a couple of times and get a full view of the tent to understand what needs to be done.

#6

If you're looking to cut a hole in the stove jack, the Avalon stove jack has a 5" and 6" pattern, which you can use a cutter, scissor or pocket knife to carve out. Make sure the canvas flap on the outside is rolled up before cutting.



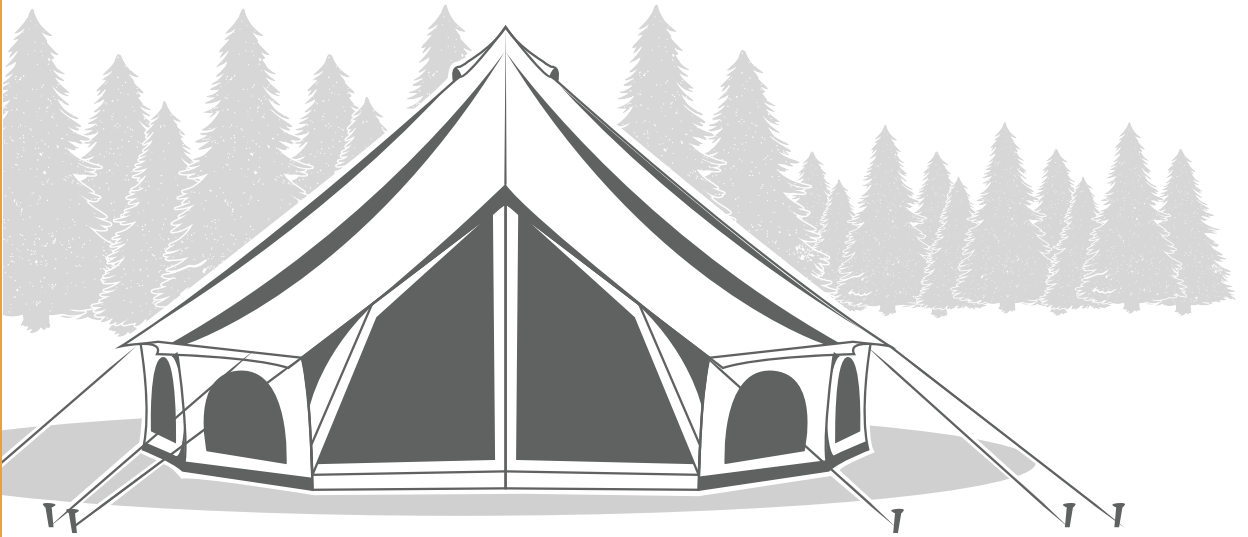

Taking down, packing and storing your Avalon

 
Before packing away your tent, the most important thing is to ensure that the tent body and all included components are dry. Packing a wet tent will contribute to mold and mildew growth on the material, reducing the lifespan of the tent.

Of course, sometimes rainstorms hit, and drying your tent completely simply isn't possible. If this is the case, be sure to unpack it and lay it out to dry as soon as possible.



Clean the tent

After the tent is dry and you've removed all your gear, thoroughly sweep out the inside of the tent. Clear out all trash, leaves, sticks, and as much dirt or debris as possible. Any dirt left in the tent will be pressed into the canvas when it's rolled up, which is no good! Also, make sure all windows and doors are zipped up before you begin teardown.



Pack the tent

- Loosen all ropes, remove their pegs and bring down the poles.
- Remove the poles from their sleeves.
- Pull the pins out from the base of the tent. Store the pins, pegs and mallet in the tool kit, and the poles in their own bag.
- Fold the tent in half lengthwise, bringing the back of the tent to the front, to roughly make a semi-circle.
- Fold the tent in half again, forming a quarter-circle.
- Fold the outer corner of this quarter circle back towards the middle, so the shape is now somewhat rectangular.
- Roll the tent tightly from one end to the other, making sure to push out any air pockets as you roll.
- Once rolled, secure the tent with the straps that came with the tent.
- Place the tent, pole bag and tool kit back in the canvas bags they came in.



Store the tent

Storing your tent only once it is dry is the most important part of storage. As mentioned above, be sure to let your tent air out and get *completely dry* before you pack it away for an extended period.

Also, store your tent in a cool, dry place with good ventilation, which will stop mold or mildew from building up on the canvas, and ideally keep it out of direct sunlight. With proper care and storage, your tent will last for countless seasons to come.

Now that you know how to prepare, set up, take down, and store your tent, it's time to head out into the great outdoors and [#reconnectnow](#).

Are you a Wanderer yet?

If you love your gear, join our exclusive rewards program to earn points for purchases, level up through VIP tiers, and redeem points for your favorite gear.

Join the program



You can also chat with us on the website 24/7.



Caring for your tent

Never store your tent when it's wet or damp

Make sure to never store your tent when it's wet or damp, and this includes the ropes. The moisture trapped inside can lead to the formation of mold or mildew, which will reduce the lifespan of your tent. If you cannot dry your tent fully before tearing down at your campsite, make sure to lay it out or set it up completely as soon as possible after you get home to allow it to dry.

Keep your tent clean

To remove marks, use a soft brush or sponge with fresh water only and rinse with clean water. Then, allow your tent to dry completely. Remove stains as soon as they appear, regularly clean your tent and zippers of any dirt or debris, and brush snow off your tent as often as possible. Do not apply any external treatments or chemicals without consulting us first.

Set your tent up properly

A simple yet effective way to extend the life of your tent is to set it up correctly, following all the instructions. Not pitching your tent correctly can place undue stress on the canvas, seams or zippers. This can weaken the construction of your tent and may affect the performance of the tent in strong winds or heavy rains.

Don't leave your tent up permanently or unattended

To remove marks, use a soft brush or sponge with fresh water only and rinse with clean water. Then, allow your tent to dry completely. Remove stains as soon as they appear, regularly clean your tent and zippers of any dirt or debris, and brush snow off your tent as often as possible. Do not apply any external treatments or chemicals without consulting us first.



Ground Tarp

Scan to get yours at **10% off**



Protection from dirt, dew and stains



Extend the lifespan of your tent



Lightweight and easy to carry



Awning

Scan to get yours at **10% off**



Sun protection



Rain, snow and weather resistance



Complete Regatta package

Gear Range



Upgrade your gear



Bags



Hoplite Top Load



Hoplite G.I. Top Load



Filius Duffel



Hoplite Parachute



Hoplite Duffel



Messenger Bag

Log Carriers



Rectangle



Tote



Boat



Diamond

Dog Bed

